 


Extra Long TV Wall Mount

Black

White

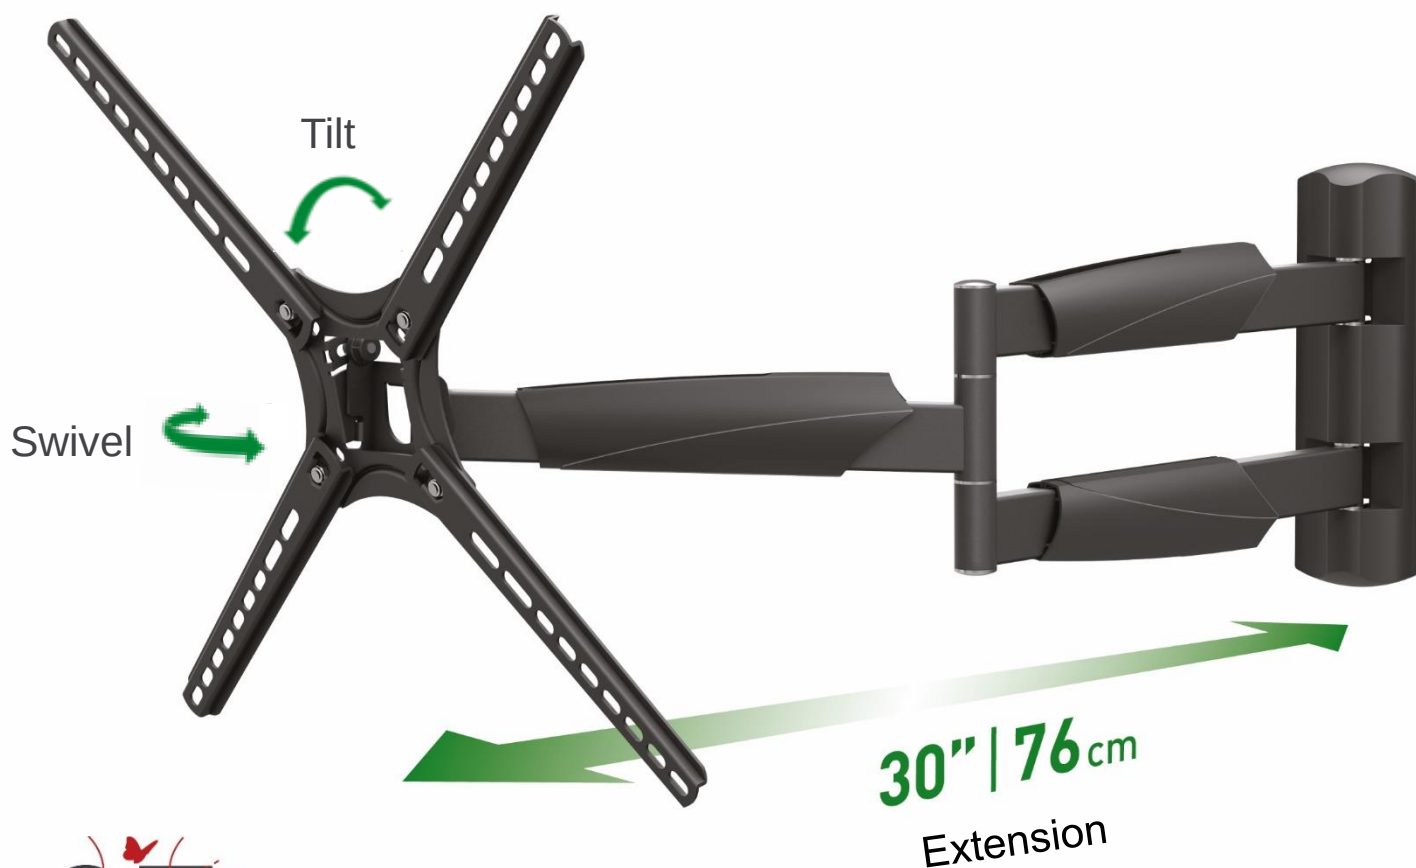

Download Assembly Instructions with Text

For more information: [barkanmounts.com](https://www.barkanmounts.com)

If you are satisfied with the product, please give us a 5 stars ★★★★★ rating on the website you bought it from. If you are not satisfied, please contact us at <https://www.barkanmounts.com/support> and we will solve the problem for you.

TV Weight		
US	Max	EU
80lbs		36kg





TV Size	
13"-65"	
33cm-165cm	

Also fits screens up to 77" with
400X400mm VESA connections



**Safety instructions and installation warnings (provided separately)
must be read in full, prior to assembly.**



Included Parts not to scale

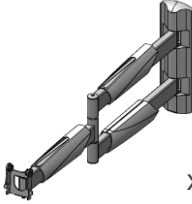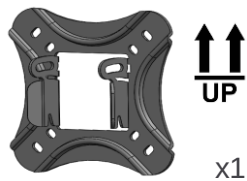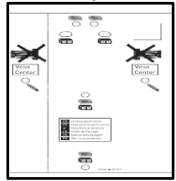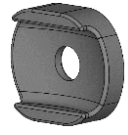A Bracket  x1	B TV Plate  x1	C Adaptor  x4	D Drilling Template  x1
Z6  x6	Z7  x4	Z8  x2	Z9  x2
Z10  x4	W1  x4	W2  x4	W3  x4




#	M	L mm	L inch	pcs
Z1	4	20	3/4	4
Z2	6	16	5/8	4
Z3	6	25	1	4
Z4	8	25	1	4
Z5	8	45	1 3/4	4

Required Tools

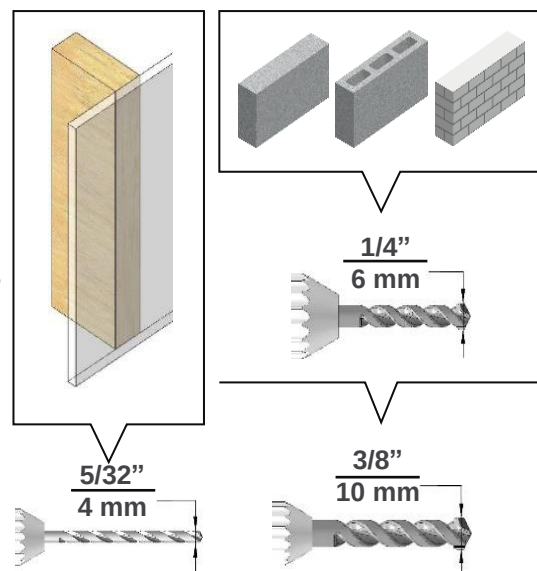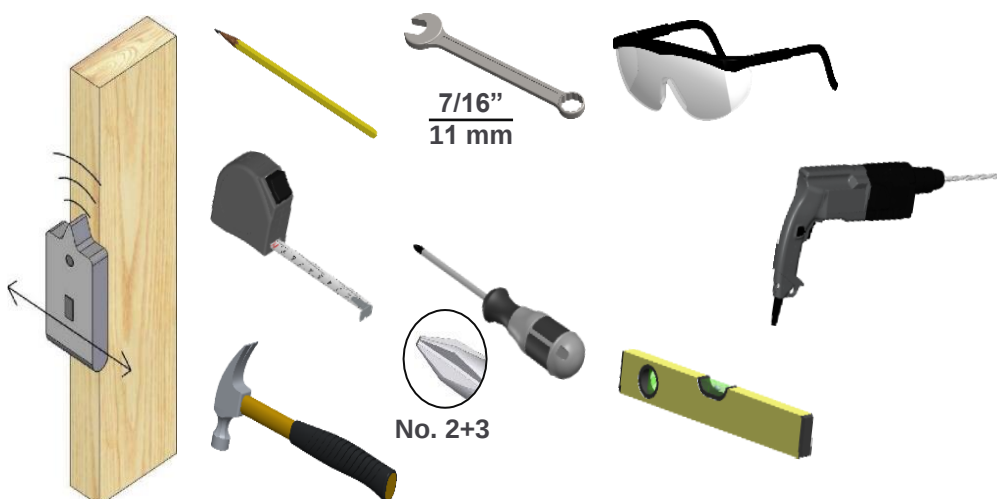


1

Connect TV plate (part B) to the back of the TV.

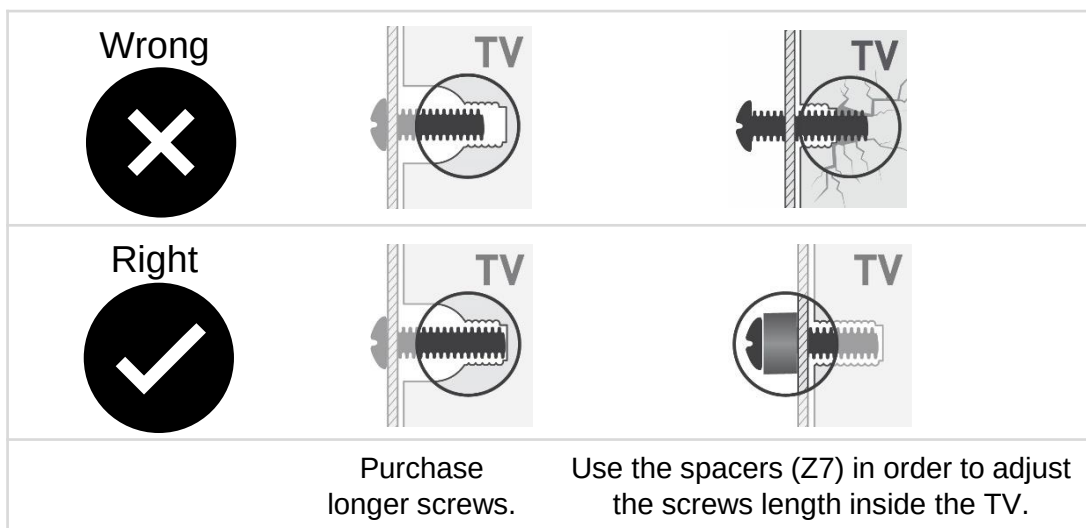


Continue according to your TV mounting hole pattern.

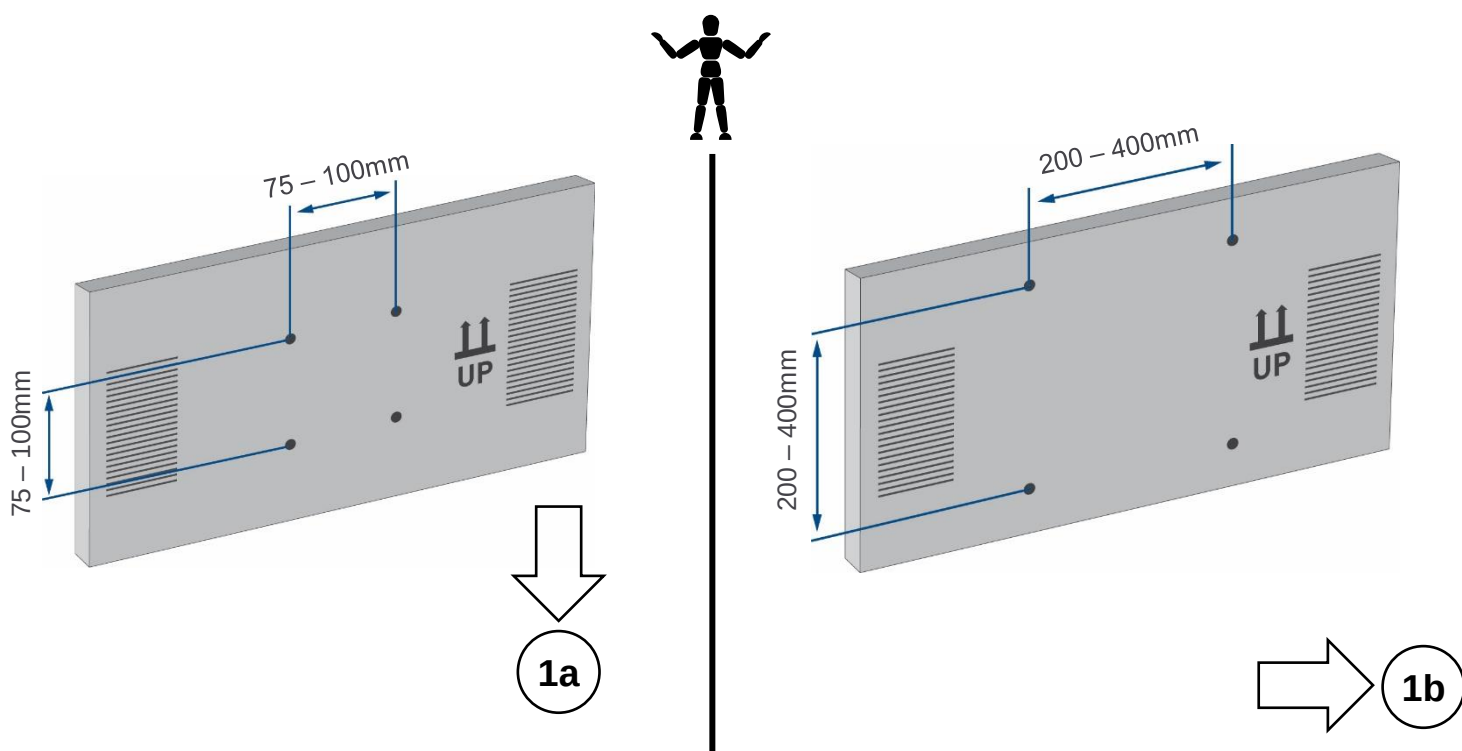

1a


75x75 mm up to 100x100 mm hole pattern.

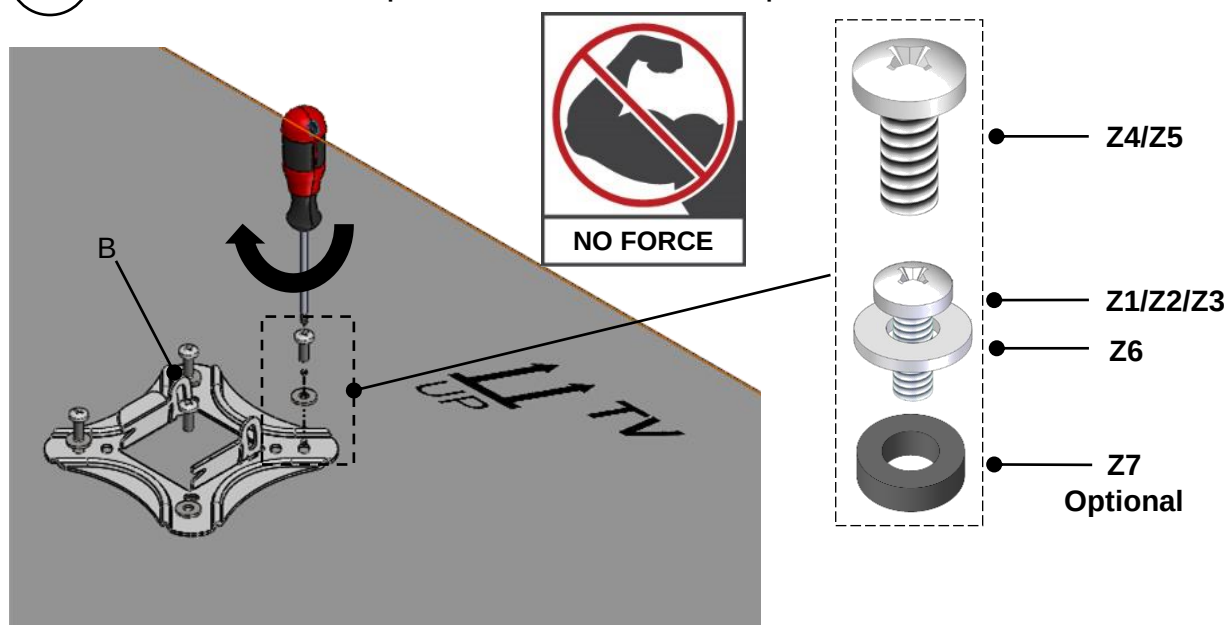


2

1b**Hole pattern 100x200 mm up to 400x400 mm:**



Disassemble the screws, connect the 4 Adaptors to the TV Plate and reassemble the screws.

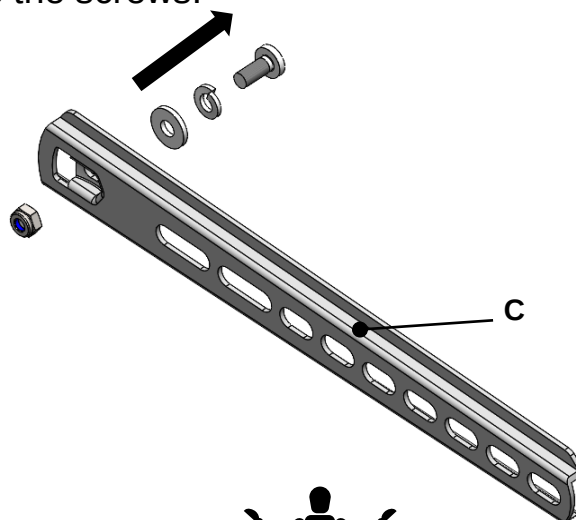I**II**





Flat TV

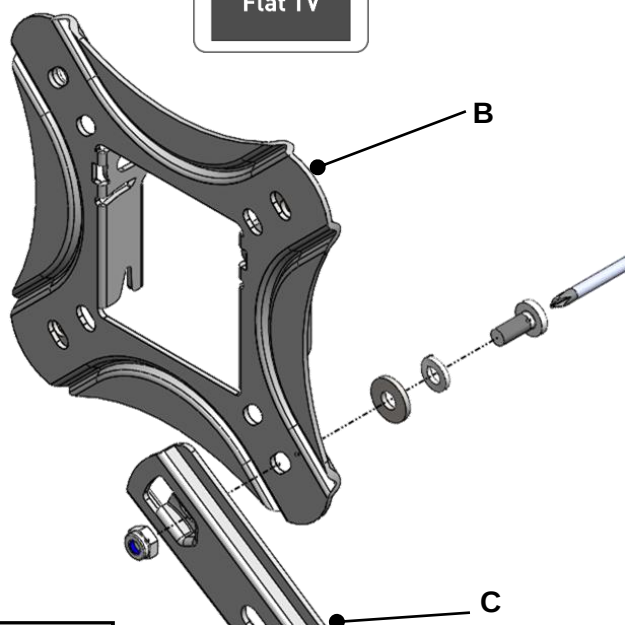


Curved TV

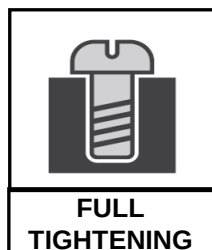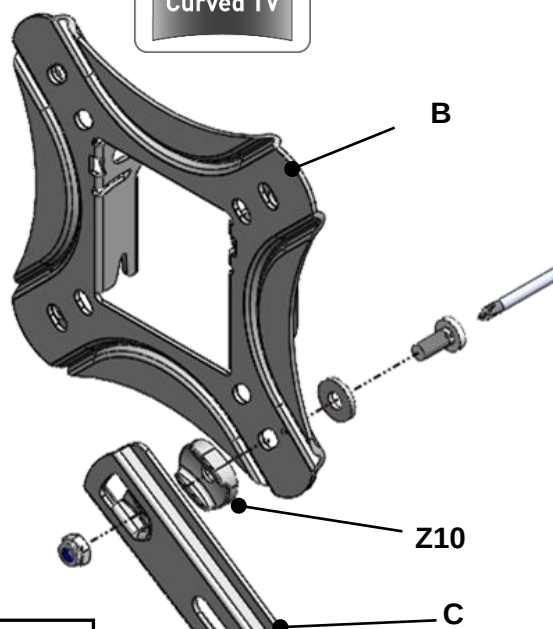

Z10

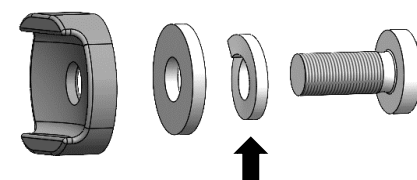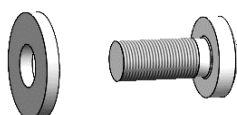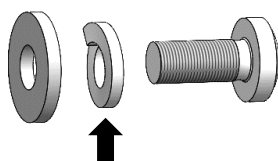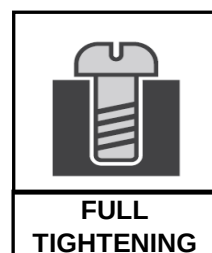


Position the Adaptors according to your TV's hole pattern.

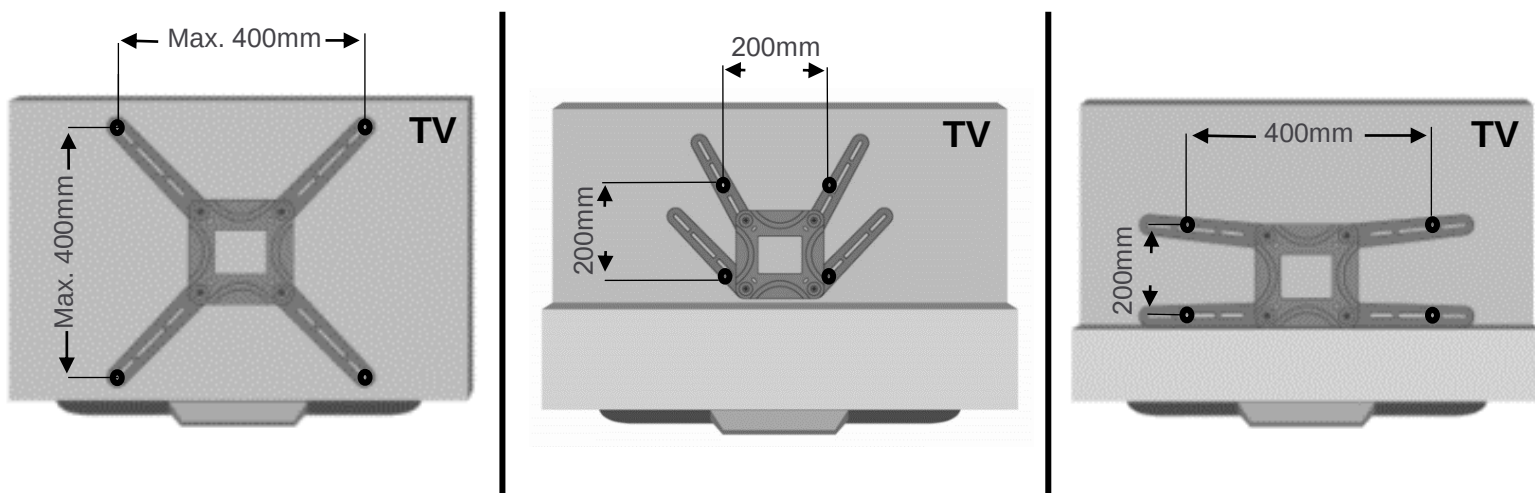

For more positioning options refer to the last page.

2


Connect the TV Plate (B) with the Adaptors (C) to the TV in all 4 connection holes.

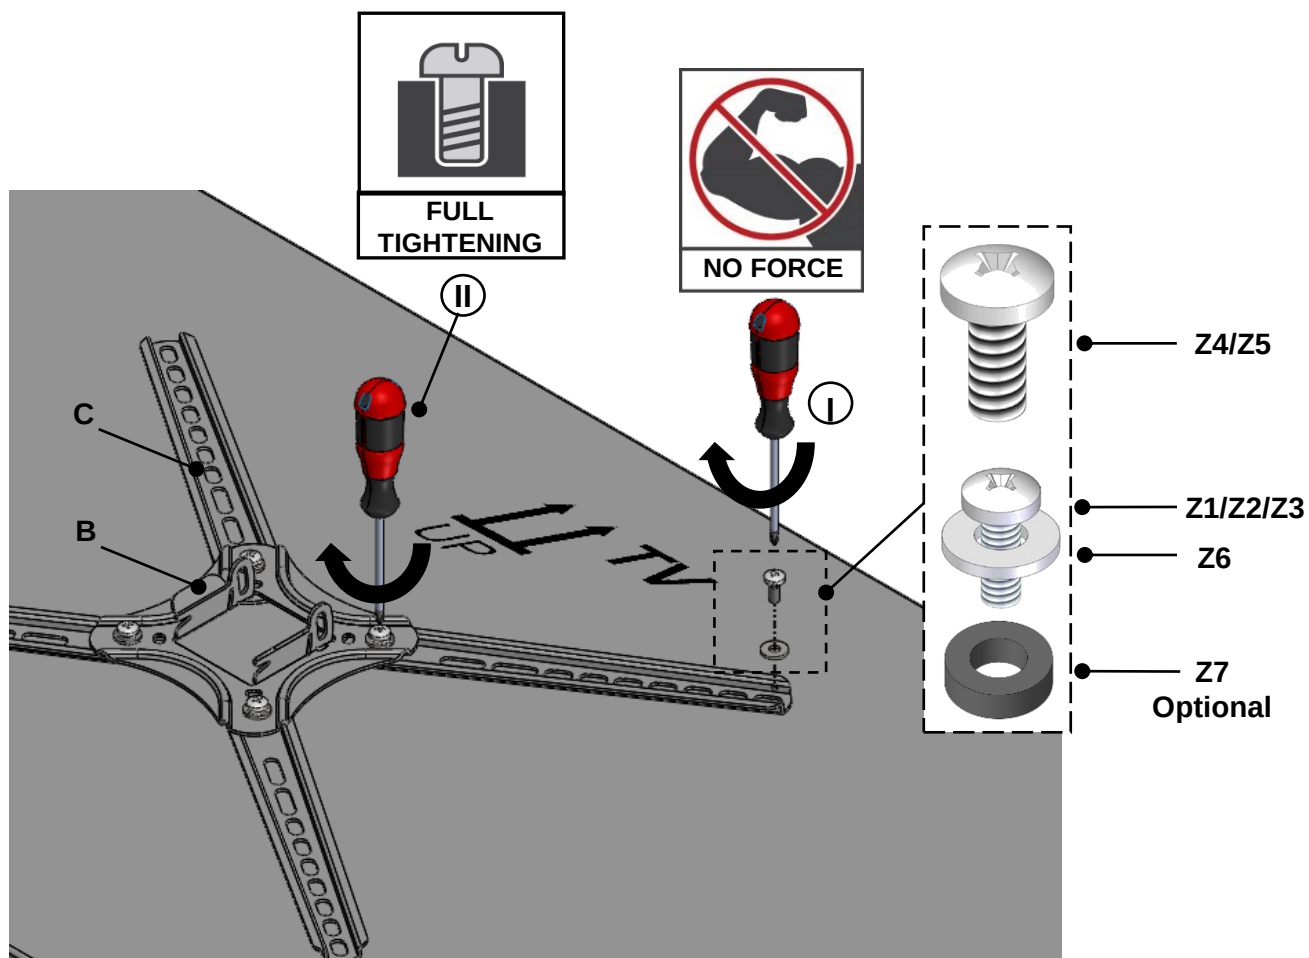


3 Determine the desired installation height

Note, the center of the TV back screen mounting holes is usually different from the center of the entire screen.

- 3a The recommended height of the screen center from the floor is 43" – 47" / 110 - 120 cm.
Determine the distance - ① from the bottom edge of the TV to the floor.

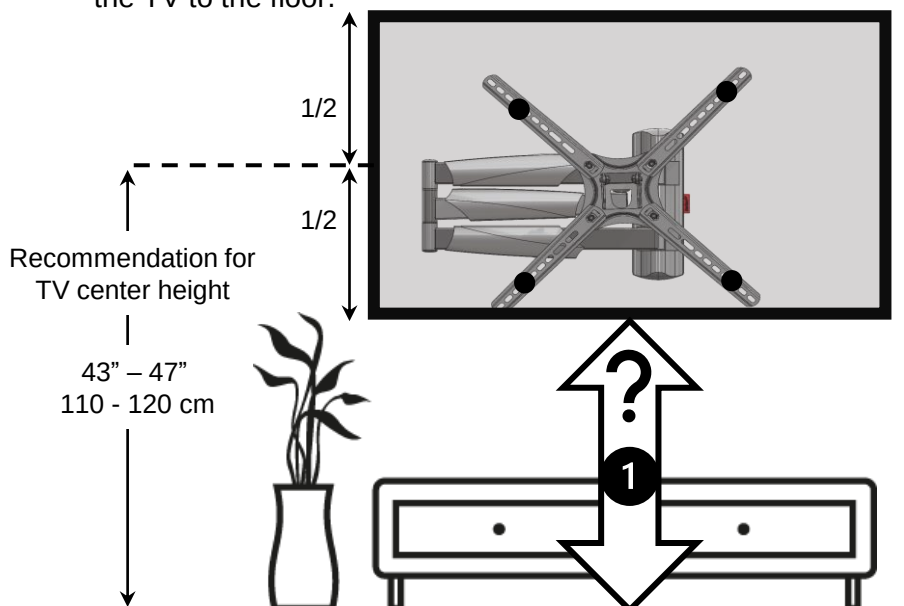


- 3b Determine the distance - ② from the center of the back screen mounting holes to the bottom edge of the TV.

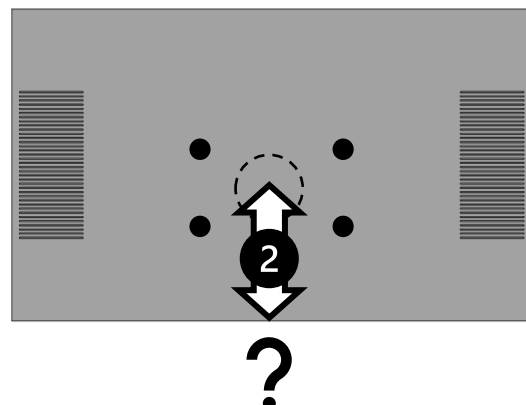


- 3c Position the center hole of the drilling template (D), at the distance from the floor that equals the sum of the combined distances of ① and ②. On the wall, mark the center of the back screen mounting holes.

Make sure the template has been printed correctly: check that the distance between the holes matches the written dimensions.

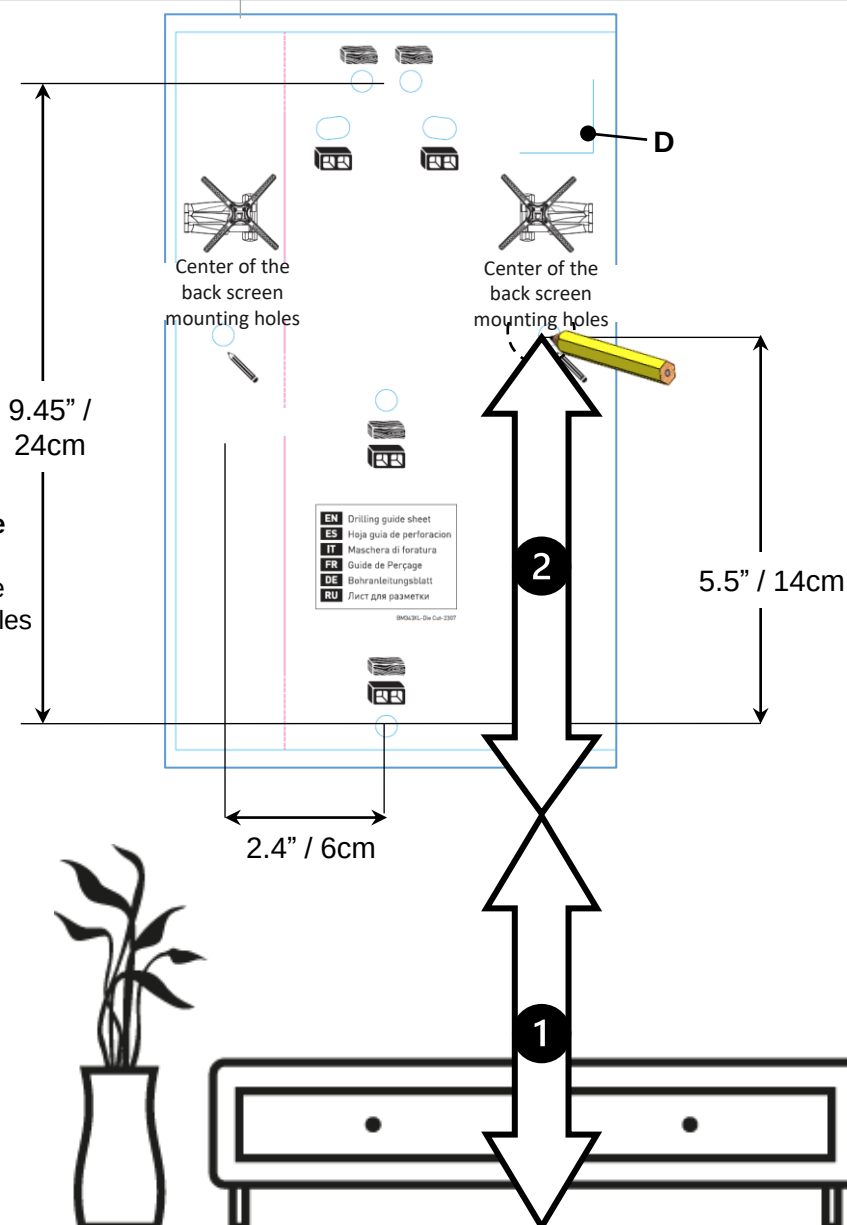


4

Remove the Cable Management plastic covers (I) and move the wall plate cover away from the wall plate (II).

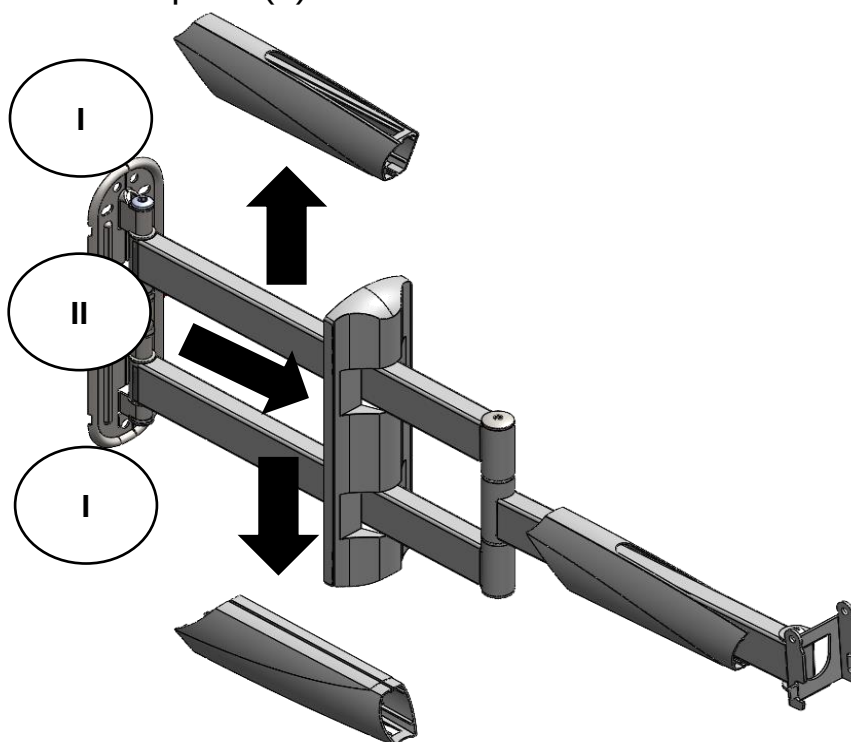


5

Follow the steps according to your wall type.

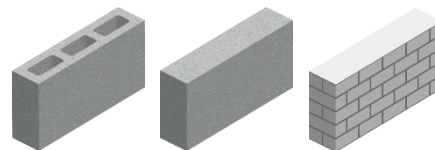


6

Mark the holes on the wall according to the required height.

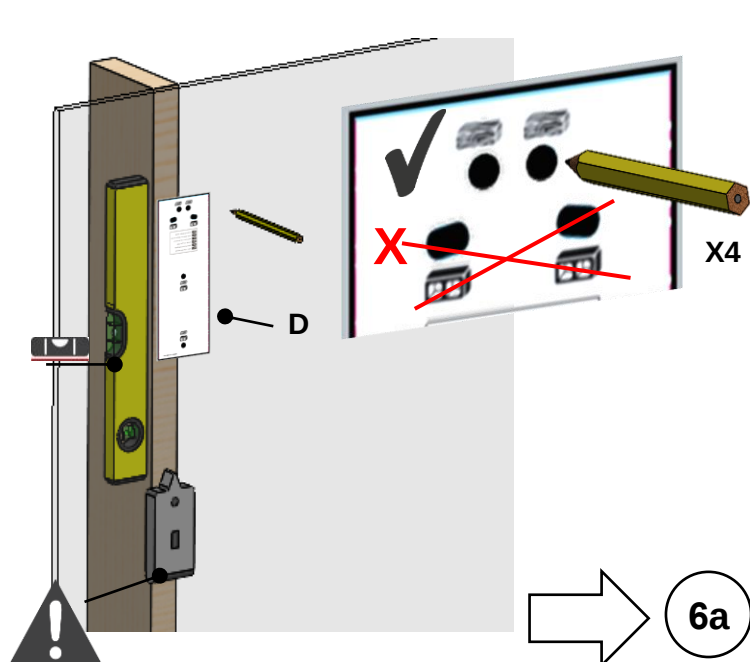


6a

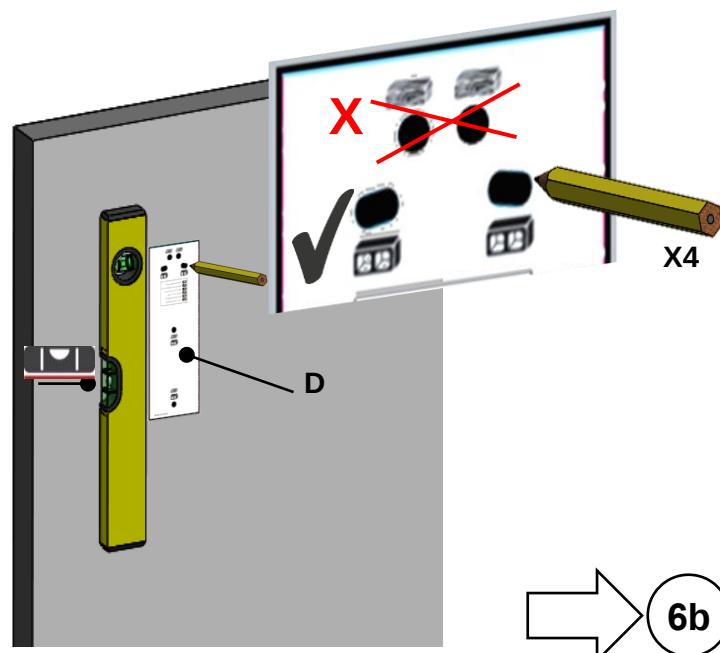


6b

6a


Make sure all the holes are drilled into the stud.

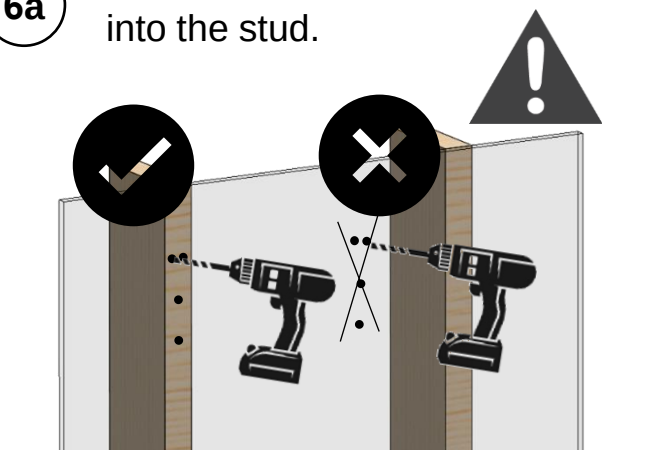

Drill with 5/32" \ 4mm drill bit.

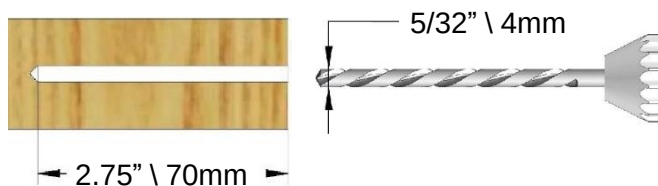


W3+W1

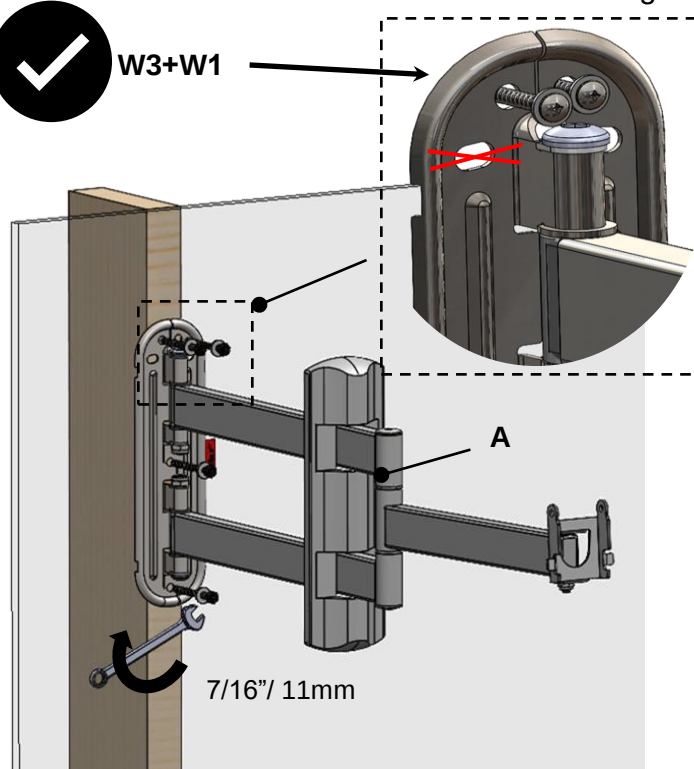


6b




First use 1/4" \ 6mm drill bit.

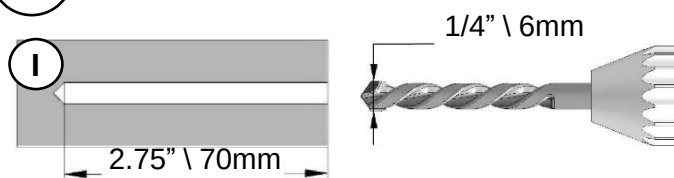

Afterwards use 3/8" \ 10mm drill bit.

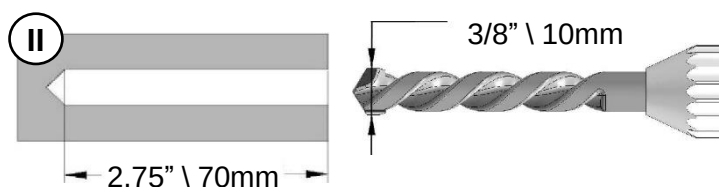


Make sure there are no electrical/water lines in the wall before drilling and then drill according to the markings

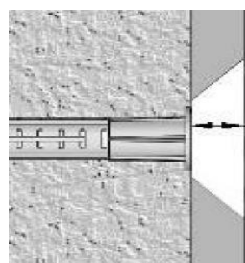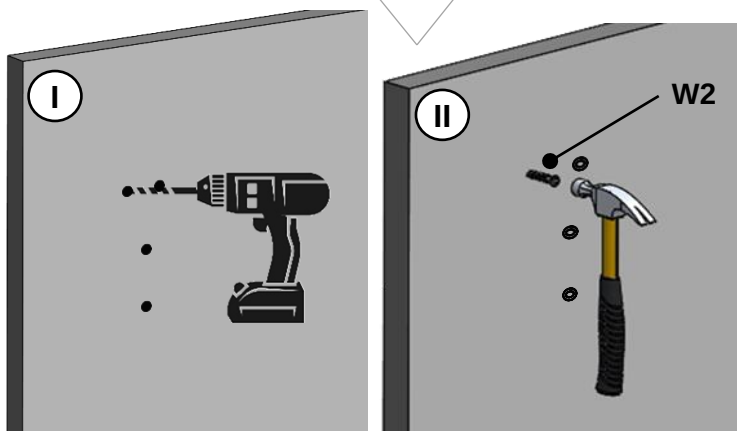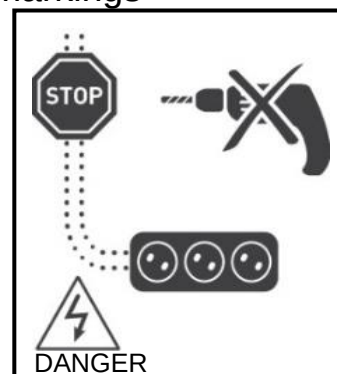

3/8" \ 10 mm


The anchor must be sunk at least 3/8" \ 10 mm into the plaster coating.

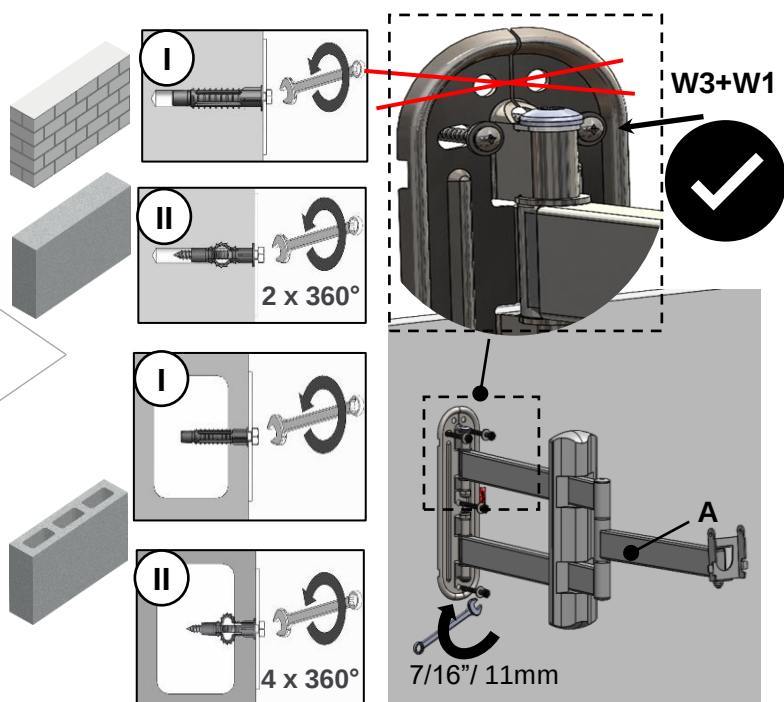

7


Weight test

Apply force on the upper part of the Bracket (A) and make sure it is well connected.

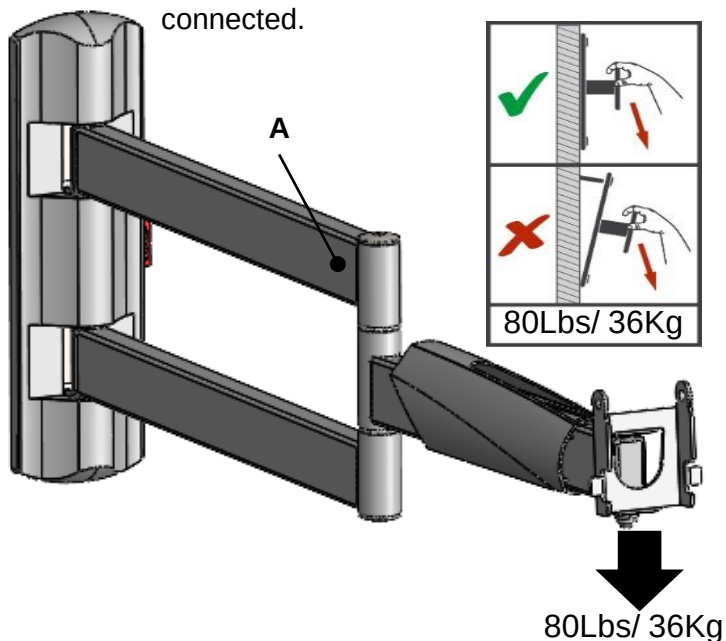




8

Place two nuts in the plastic nut-housings.

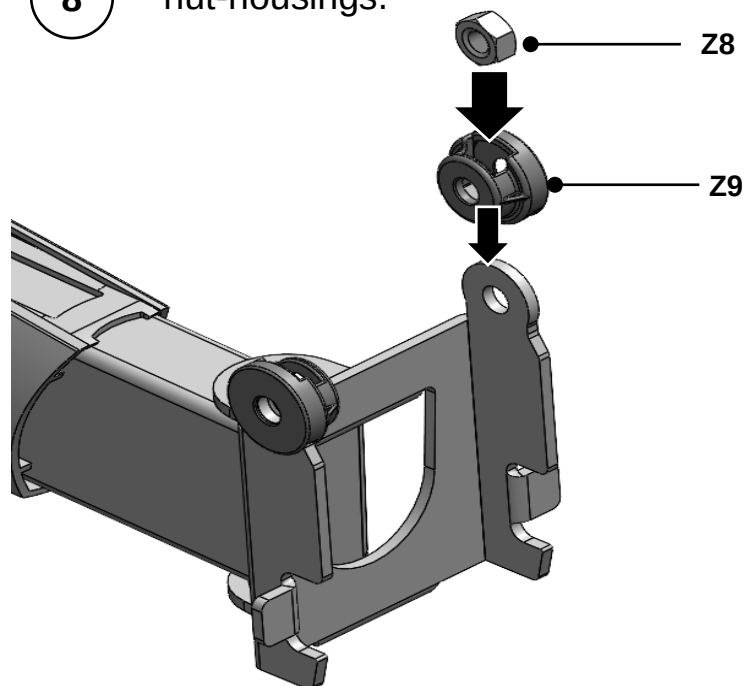

9


Connect the TV with the TV Plate (B) to the Bracket (A).

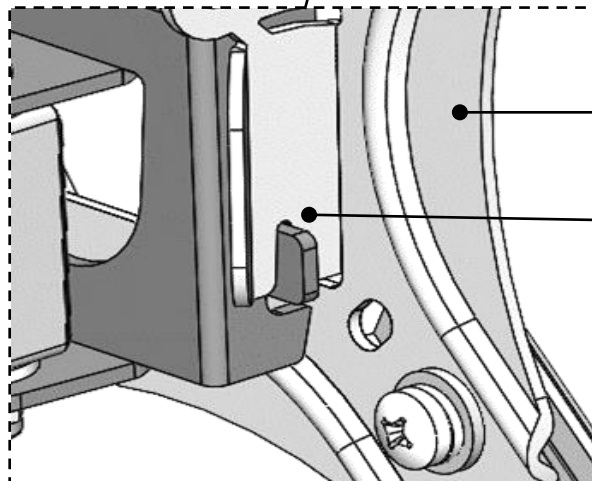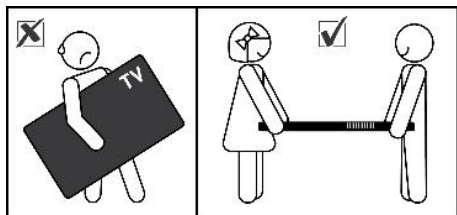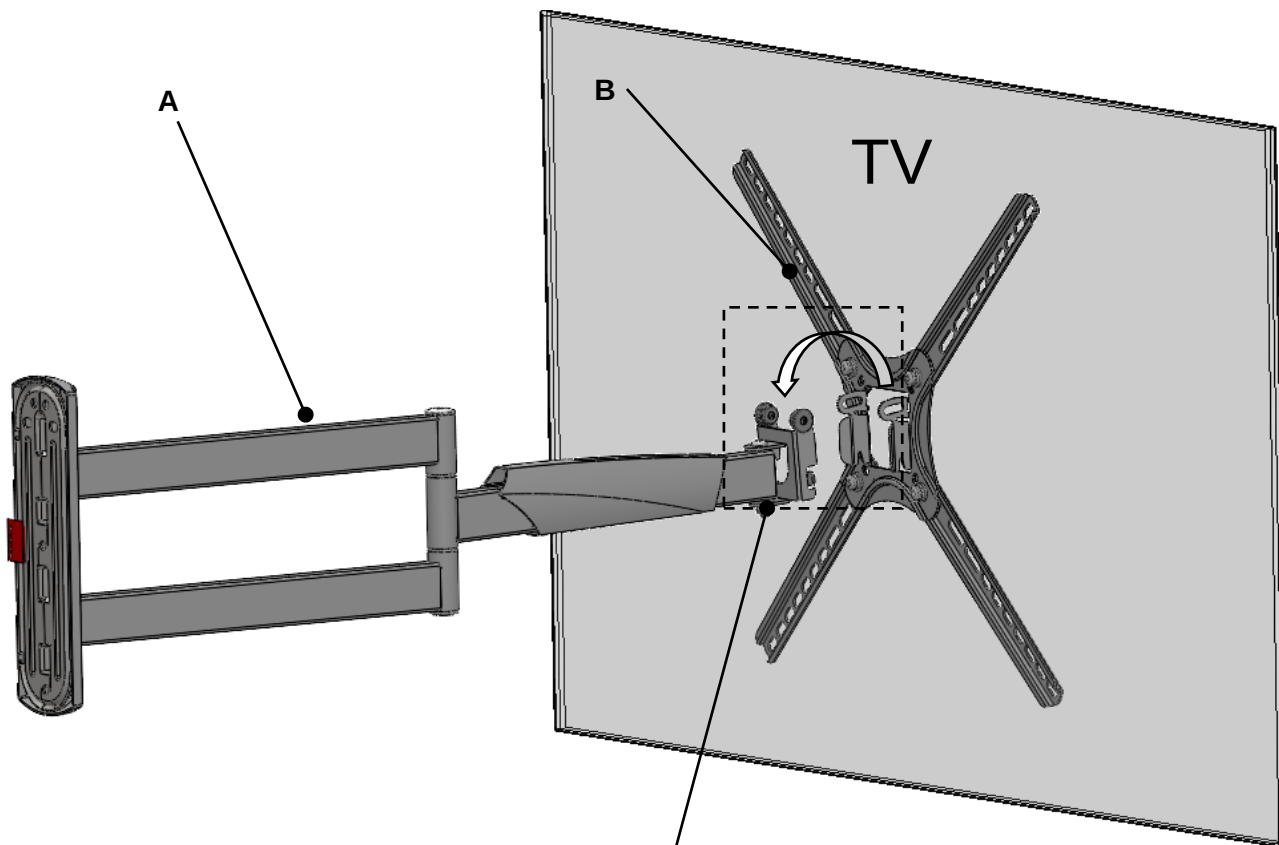

Make sure that the TV Plate (B) slots are positioned properly on the 2 small beams.

10


Insert and tighten the screws from both sides to create friction for the tilt mechanism. Adjust the TV tilt angle carefully.

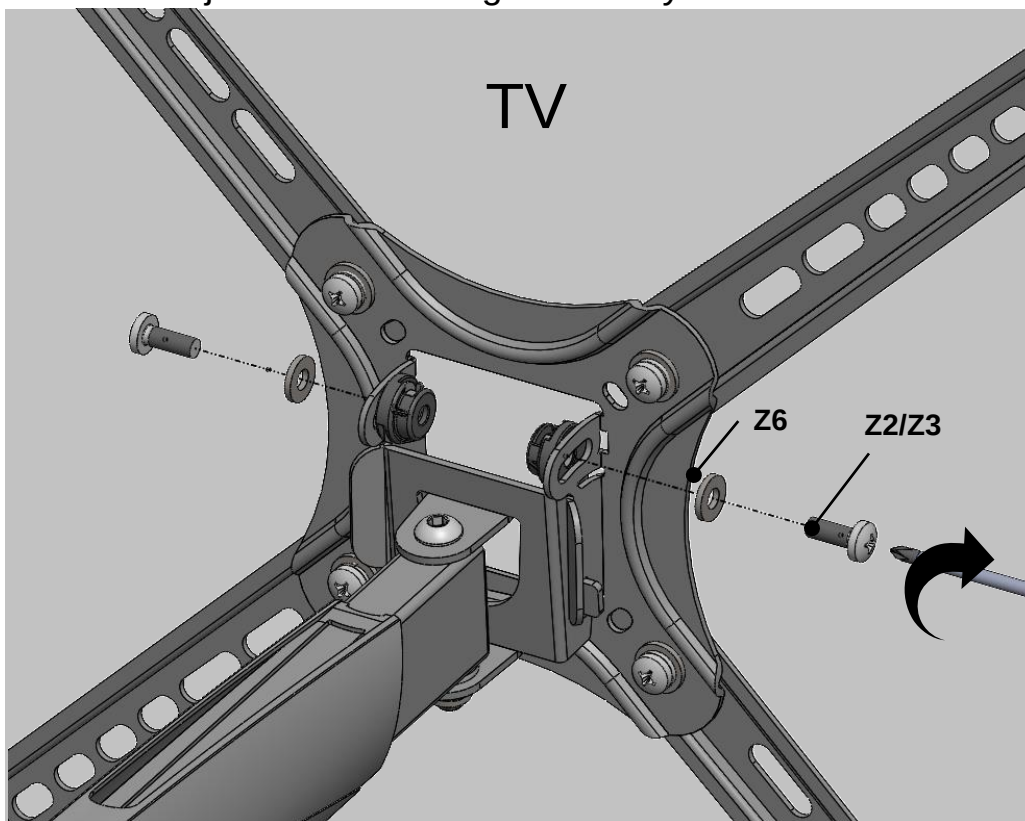

11


I

Place the TV cables in the Cable Management covers.

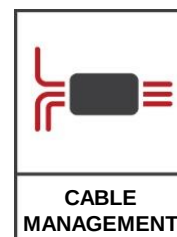


II

Reconnect the Cable Management covers to the mount.

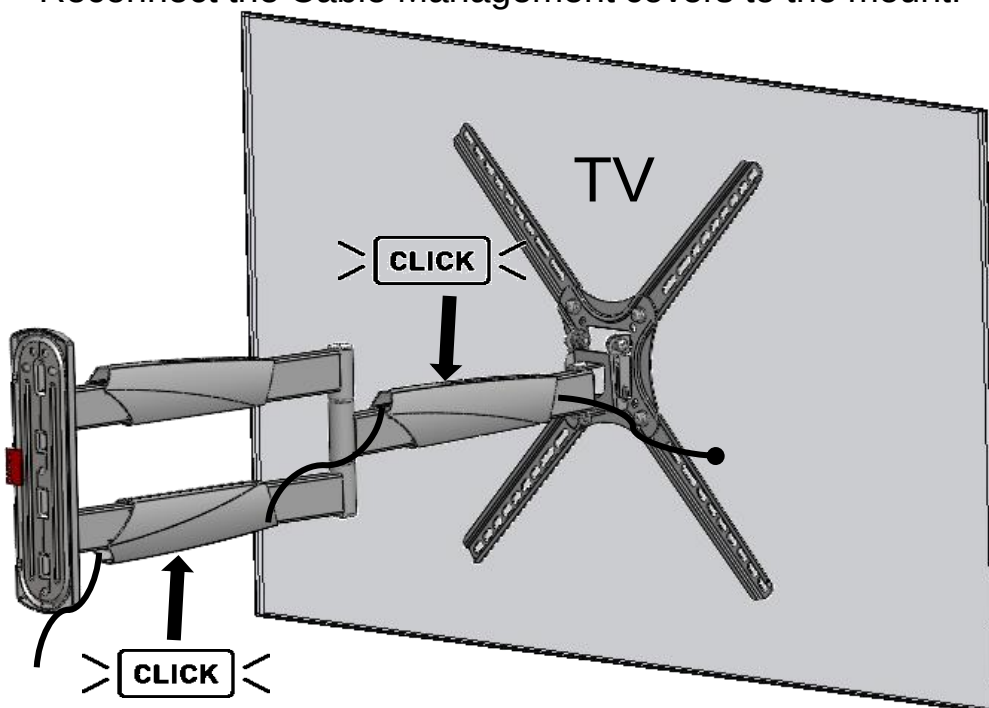



12

Move the TV - by pulling/pushing the Bracket (A).
Be careful when you move the TV by the screen.


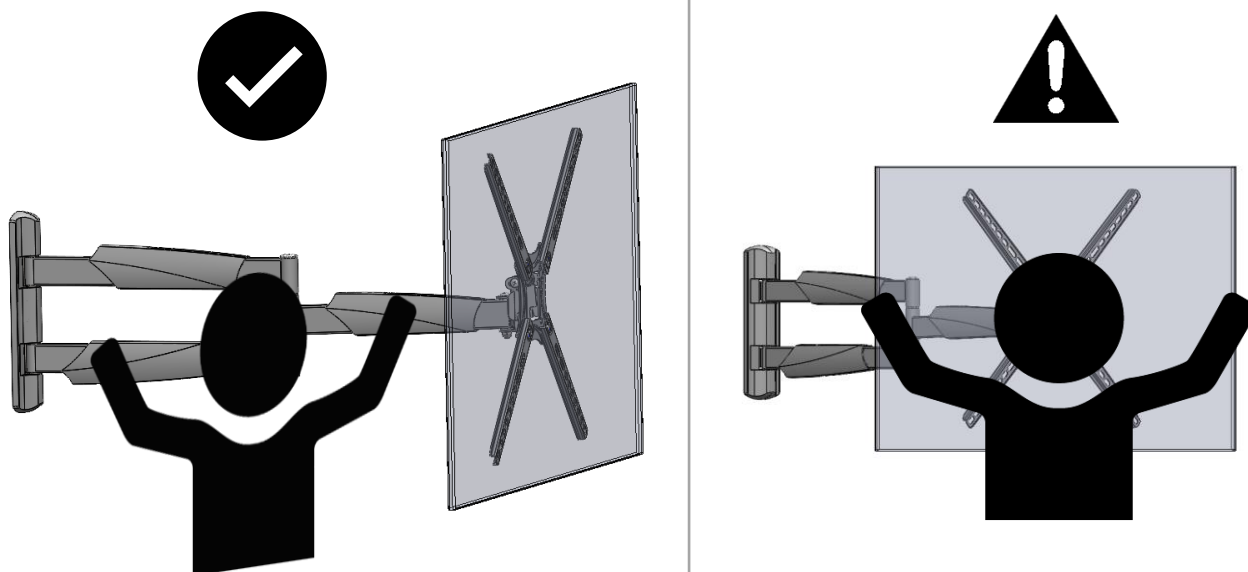


13

Level the TV.

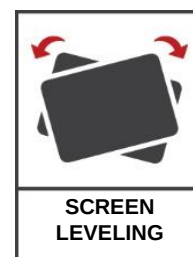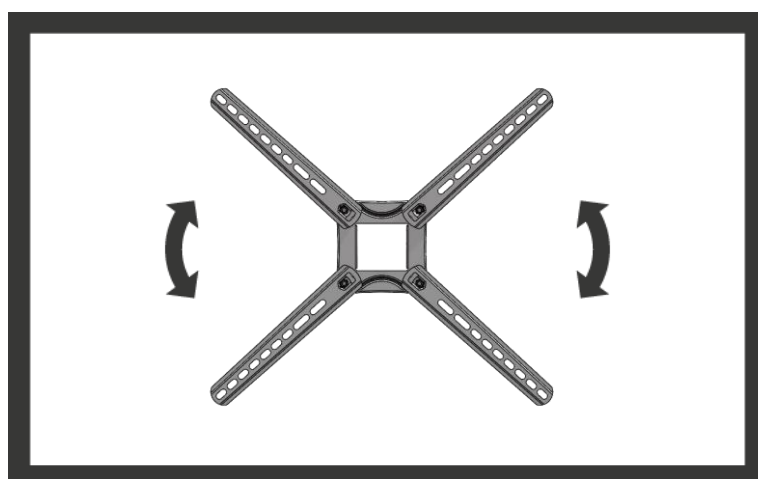


To disconnect the TV, remove the screws from both sides of the tilt mechanism (I) and lift the TV (II).

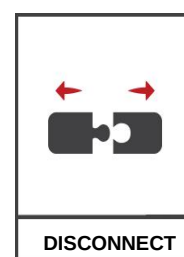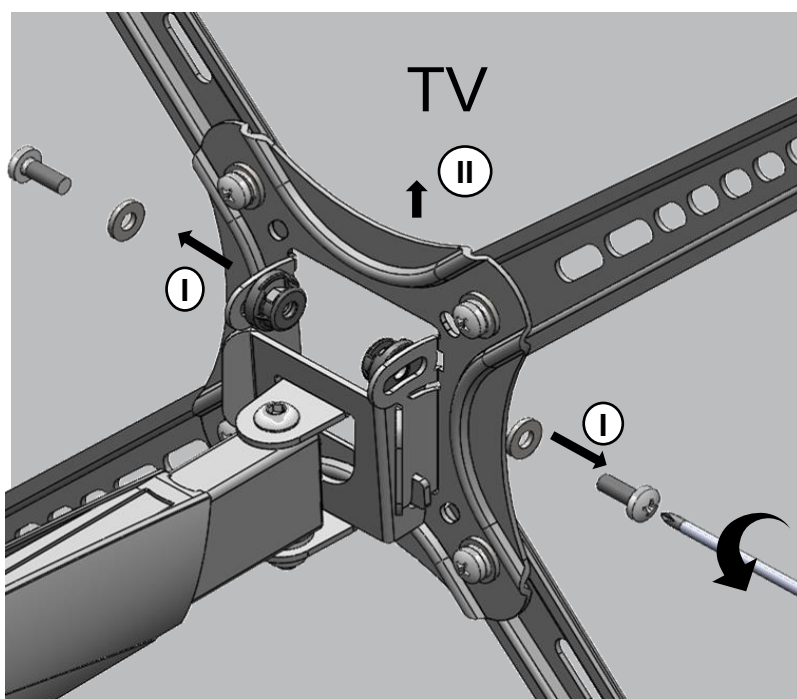

BACKSCREEN CONNECTION POSITIONING OPTIONS


1

75x75, 100x100

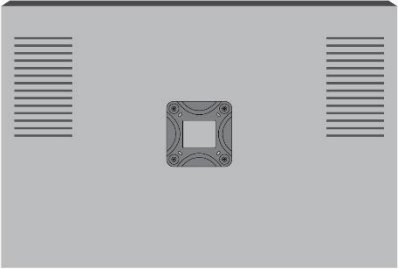


2

200x100

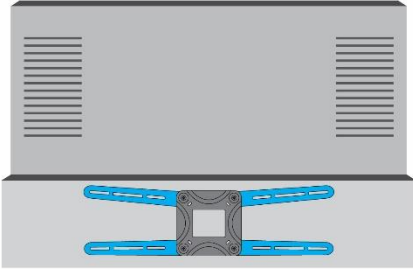


3

300x200, 400x200, 400x300

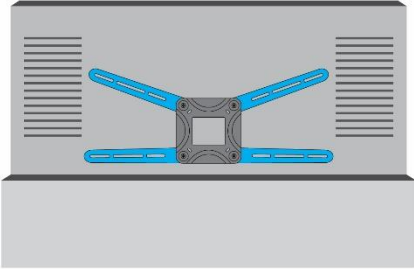


4

200x200, 300x300

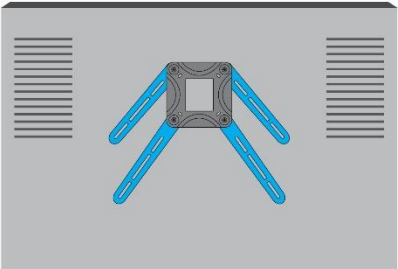


5

200x200, 300x300

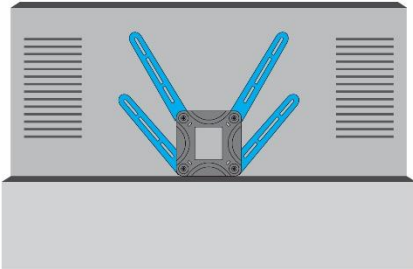


6

100x200

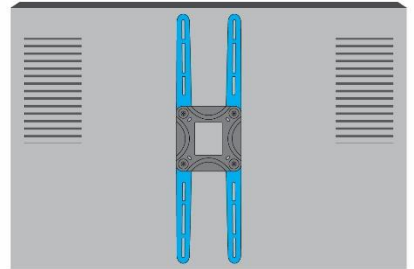


7

200x200, 300x300, 300x400, 400x400

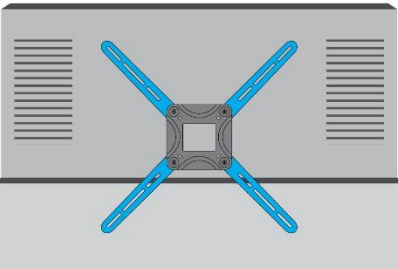

8

300x200, 400x200, 400x300

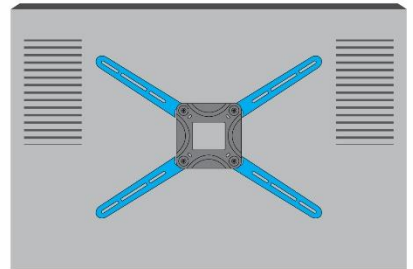


www.barkanmounts.com/FAQ

VESA-Positions-BNG-2111-400x400

