6.ELECTRICAL COMPONENT PROBLEMS

Induction hob not working:

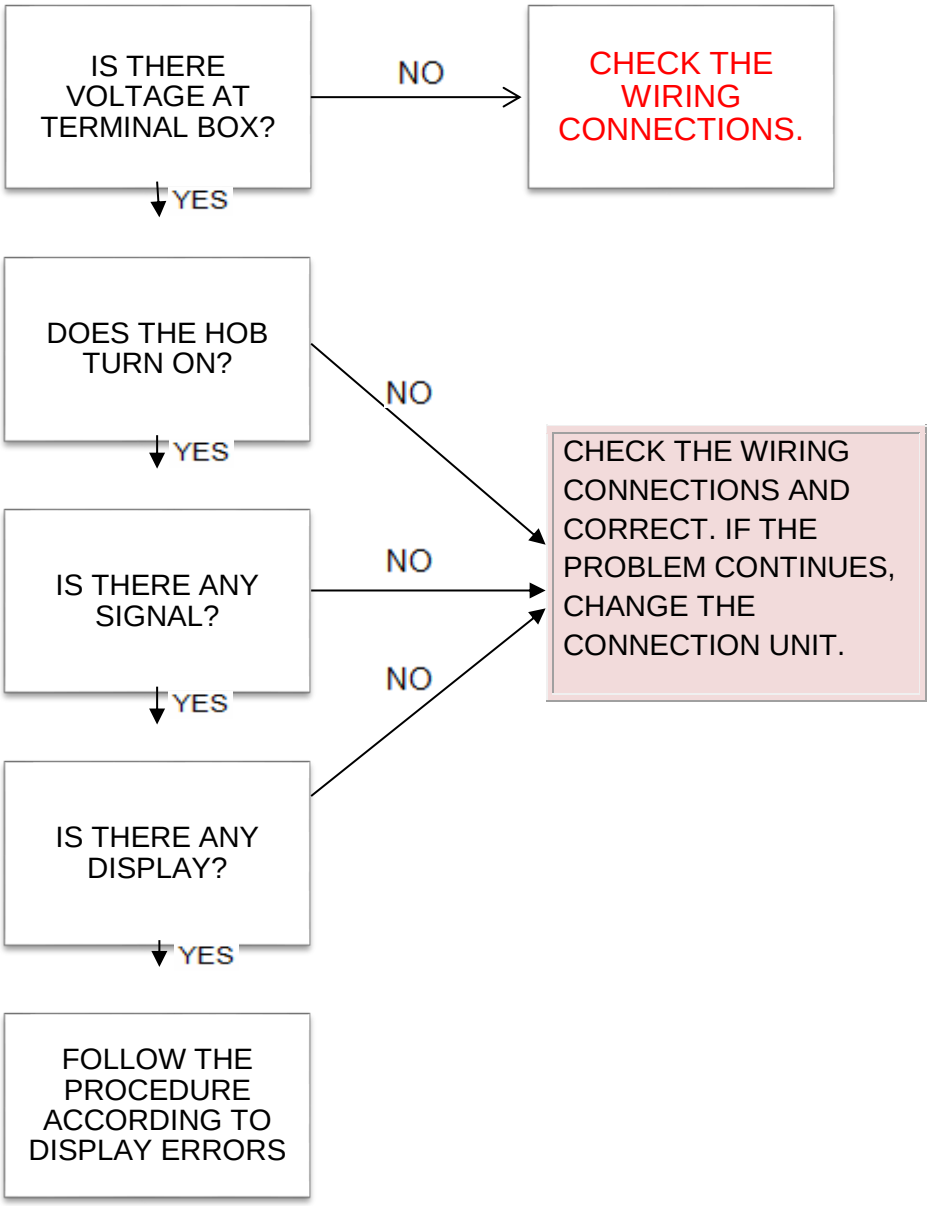

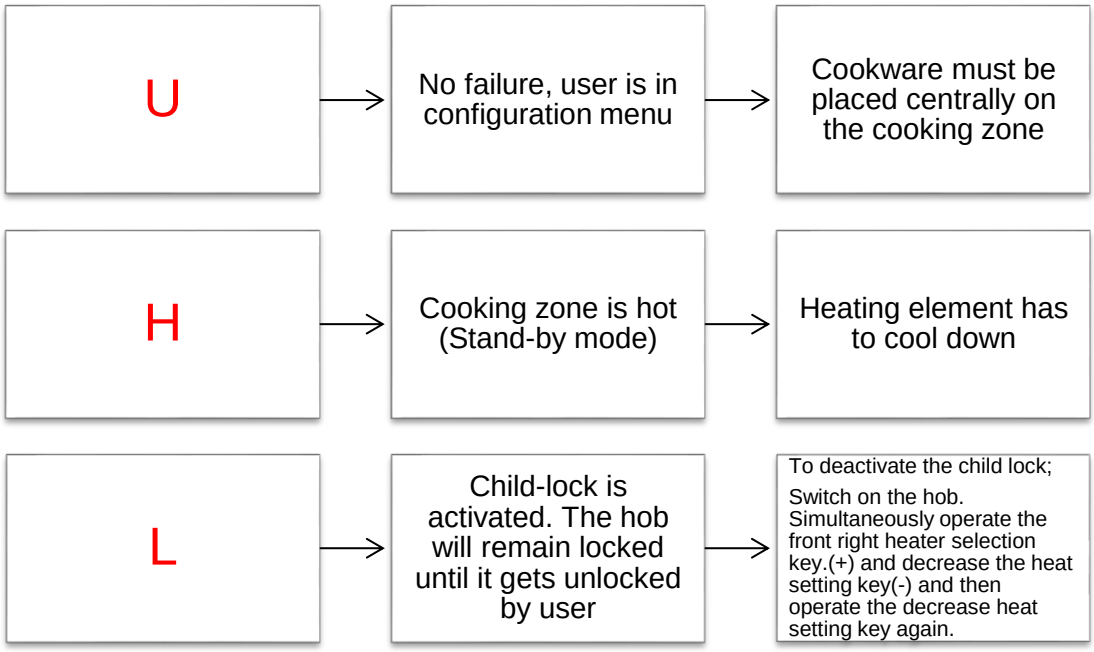

Induction hob display errors:

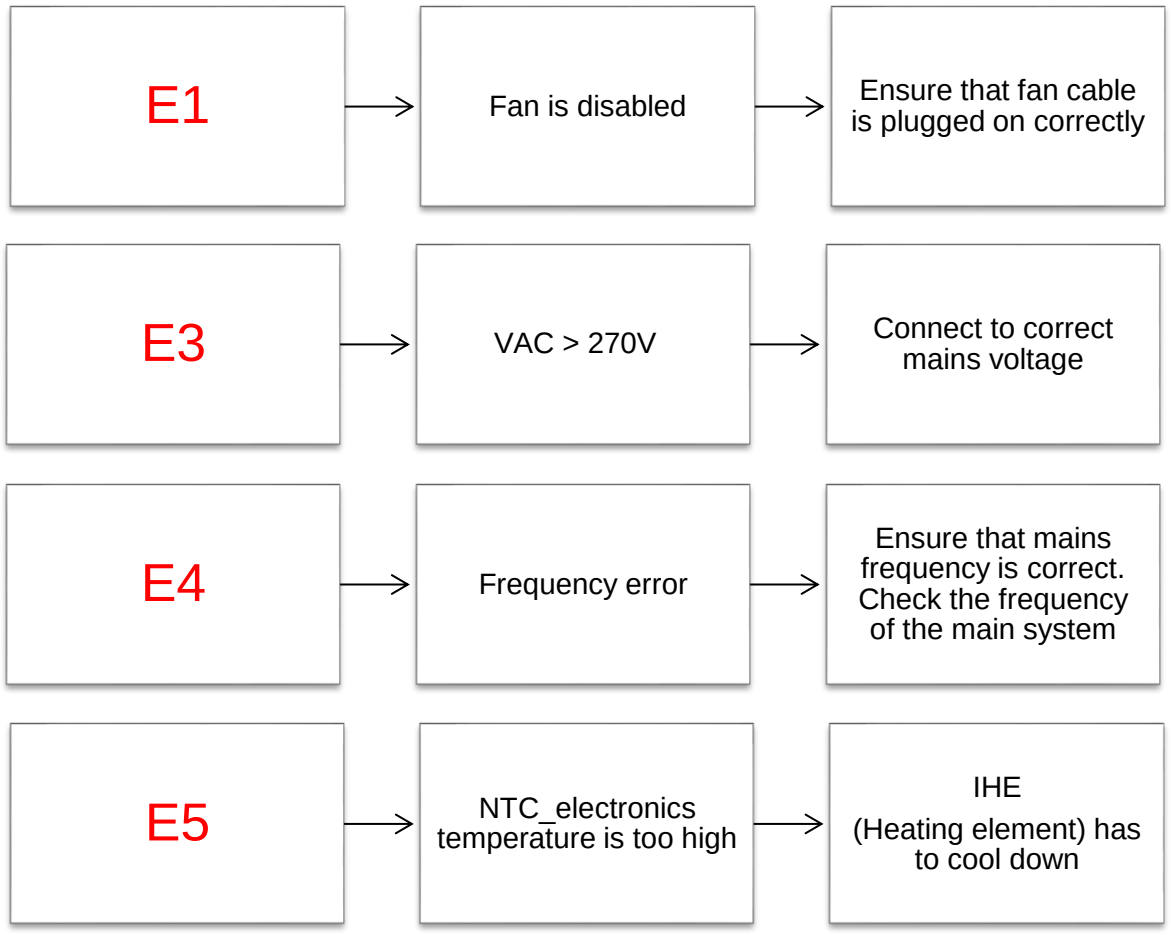

E3 and E4: Could mean that the one or more pins are pushed in, in socket/cable between cooker and hob. Check that they are aligned and that they are connect. You can use a flat screw driver to push them back into position from behind.

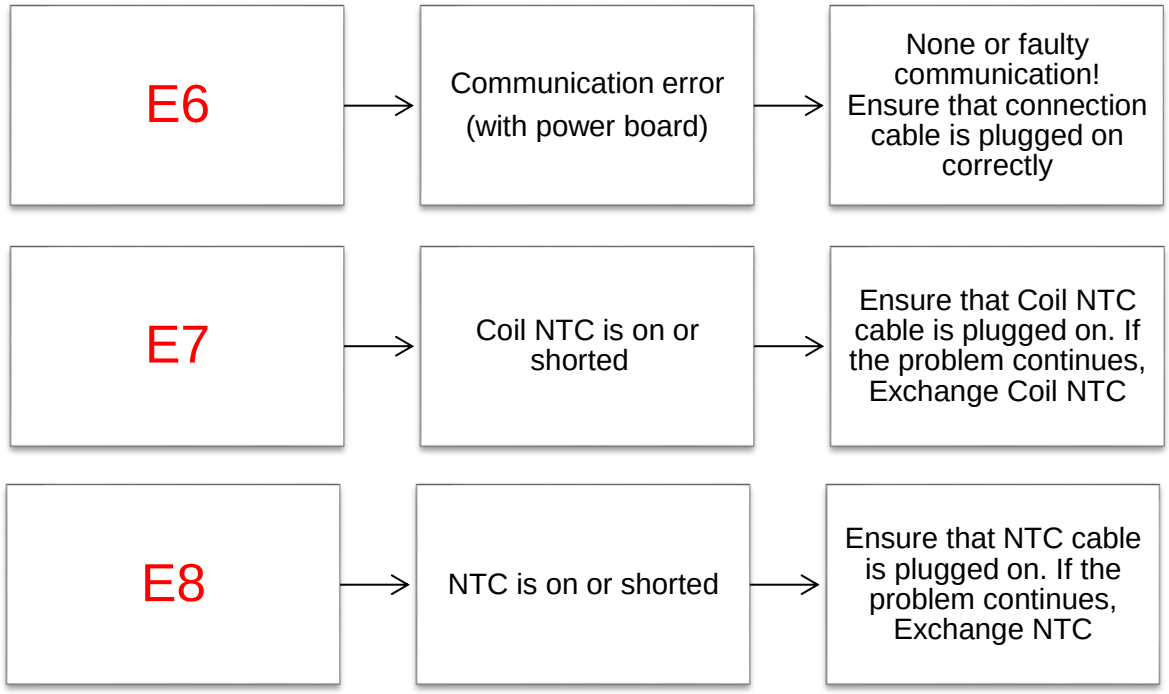
E6
Communication error (with power board)
None or faulty communication! Ensure that connection cable is plugged on correctly
E7
Coil NTC is on or shorted
Ensure that Coil NTC cable is plugged on. If the problem continues, Exchange Coil NTC
E8
NTC is on or shorted
Ensure that NTC cable is plugged on. If the problem continues, Exchange NTC